

14 CHANNEL REMOTE

Important: Please read through this section completely before beginning.

This remote control has 14 channels. Before linking the remote, determine which shade(s) you want on which channel. All shades linked to a remote will also automatically be programmed to the “ALL” channel.

It is recommended to only link one shade per channel unless it is absolutely necessary to group shades other than the “ALL” channel. This simplifies adjusting limits and setting favorites.


The 14 Channel remote may also be used to operate top down-bottom up cellular shades. **You can not mix a standard bottom up only shade and a TD/BU shade on the same channel.**

Remove plastic film from the front of the remote.

If battery is not already installed in the remote follow the instructions on page 24.

1. Select the channel that you want to link the shades to, using the **CHANNEL** selector button. The button will scroll through channels in ascending order only. The remote will go back to channel 1 after channel AL. See next page to disable unused channels.


2. Confirm that the channel selected is set for bottom up only shades by looking to see if a number 1, 2 or 3 shows in the left of the display. If a number is shown, deactivate the Top Down/Bottom Up function for that channel by pressing the **RAIL SELECTOR** and **DOWN** buttons at the same time until the rail selector number disappears from the left side of the screen.

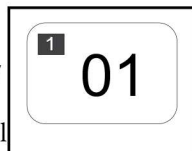


3. Press the **SETTING** button on the motor until the shade jogs once.

4. Press and hold the **CONFIRM** button until the shade(s) jogs once. The shade is now linked to the remote.

5. Repeat steps 1-5 to link remaining shades to the rest of the channels.

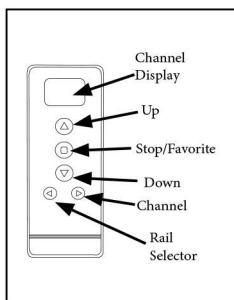

14 Channel Remote (front)

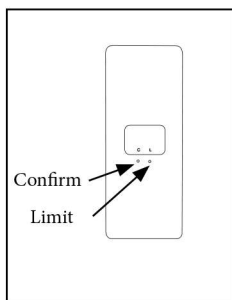

Remote (back)

DISABLING EXCESS CHANNELS ON 14 CHANNEL REMOTE


The 14 channel remote has the option of turning off unused channels, making channel selection easier.

Press and hold both UP and DOWN buttons for 3 seconds until 00 Channel displays. Release the buttons and the 00 will start to flash.

Press the UP or DOWN button to select the required number of channels (between 1-14).

Press and hold the CHANNEL and RAIL selector buttons at the same time to confirm selection. The display will go back to channel 01.

Follow the same process if you need to re-add channels.

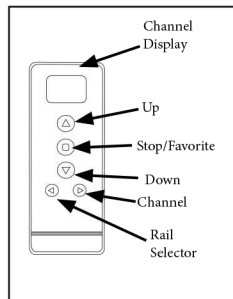

Remote (front)