

TIMER REMOTE

 
This remote control has 6 channels. Before linking the remote, determine which shade(s) you want on which channel. All shades linked to a remote will also automatically be programmed to the “ALL” channel.

It is recommended to only link one shade per channel unless it is absolutely necessary to group shades other than the “ALL” channel. This simplifies adjusting limits and setting favorites.

Remove plastic film from the front of the remote.

If battery is not already installed in the remote follow the instructions on page 24.

Turn on the remote by tapping any button. Then, tap the MODE button until you see “MANUAL” in the display.

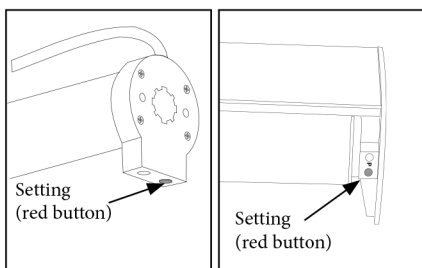


1. Select the channel that you want to program using the **CHANNEL** selector button. The button will scroll through channels in ascending order only. The remote will go back to channel 1 after all channels are displayed.


2. Press the **SETTING** button on the motor until the shade jogs once.

3. Press and hold the **CONFIRM** button until the shade(s) jogs once. The shade is now linked to the remote.

 4. Repeat steps 1-3 to program the rest of the channels.

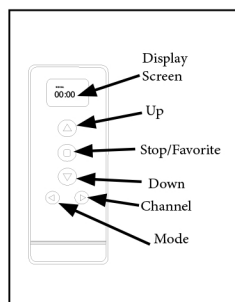

Remote (front)

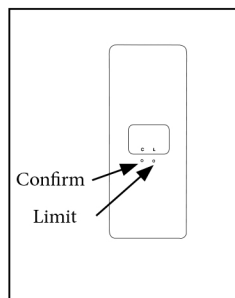 

Remote (back)