


SWITCHING MODES

⚠ NOTE:


Under Auto or Random Mode, press the mode button more than 2 seconds to check the timer method.

Manual Mode (MAN)	Only manual mode
Auto Mode (AUTO)	Manual control & timer control
Random Mode (A_{UTO})	Manual control & random 15 mins control


Press mode button (M) once to switch to Manual Mode

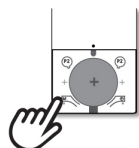

Press mode button (M) once to switch to Auto Mode

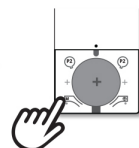

Press mode button (M) once to switch to Random Mode

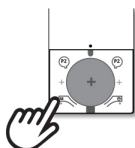

Press mode button (M) repeatedly and the three modes will be switched circularly

PROGRAMMING BUTTON FUNCTIONS

⬆	UP
—	STOP
⬇	DOWN
⬅	LEFT
➡	RIGHT

UP adjust selection up

STOP confirm


DOWN adjust selection down

LEFT cycle left on screen


RIGHT cycle right on screen

CURRENT TIME SETTING (MANUAL MODE ONLY)


Press mode button (M) and switch to Manual Mode

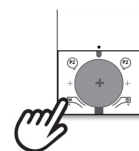


Hold time setting button until hour flashes

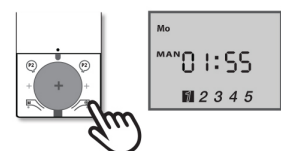

Press **UP** or **DOWN** to adjust current time (hour)

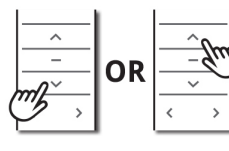


Press **RIGHT ARROW** until the minute flashes

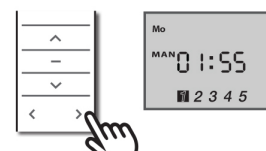

Press **UP** or **DOWN** to adjust current minute




Press **RIGHT ARROW** until the current day of the week flashes

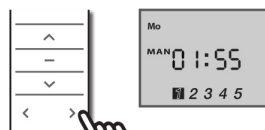


Press **UP** or **DOWN** to adjust the current day of the week



Hold time setting button until hour and minute flash simultaneously

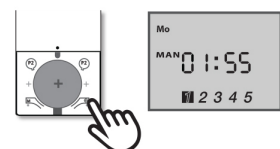

Press time setting button once and the seconds will start counting from zero (if you forget this step, after 1 min, it will automatically start counting from zero)

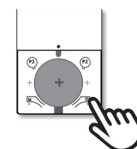


⚠ NOTE:

During the setting status, every operation should be less than 60 sec. otherwise, it will exit the setting and convert back to original status.

Press **STOP** button shortly, it will exit setting and save nothing.


HELIOS TECH SUPPORT PROGRAMMING

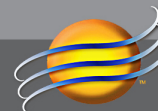

NORTH SOLAR SCREEN
RULE THE SUN™

TIMER CHECK & SETTING (NON GROUP CONTROL)


Press mode button (M) once to switch to Auto or Random Mode

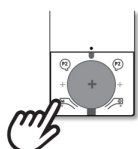

Press **RIGHT ARROW** to select all channels



Hold time setting button for 3 sec. to enter into timing mode

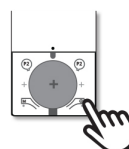

Press **RIGHT ARROW** to select a timing mode (*manual, auto or random mode*)
Random mode is used for the following examples



Press **STOP** button once to confirm, the hour will flash. You can now set the hour for UP direction

Press **UP** or **DOWN** to adjust the hour

Press **RIGHT ARROW** once, the minute will flash. You can now set the minute for UP direction

continued






Press **UP** or **DOWN** to adjust the minute

Press **RIGHT ARROW** once, you can now set hour for DOWN direction

Press **UP** or **DOWN** to adjust the hour

continued

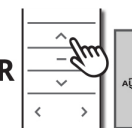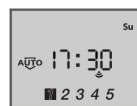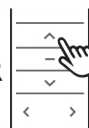


Press **RIGHT ARROW** once, the minute will flash. You can now set minute for DOWN direction

Press **UP** or **DOWN** to adjust the minute

Hold the time setting button until hour/minute flash to complete time settings.

continued

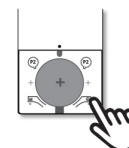

ⓘ NOTE:

To change previously programmed UP and DOWN settings, repeat all steps for 'Timer Check & Setting (Non Group Control).'