

The videos below walk you through setting the XQ5 limit stops. You can set just the lower or the upper, or you can set both at the same time. It's important that just one motor has power at a time when you are setting the limits, and that you press the channel button on the remote control for the shade you're programming.

[Setting Upper Limit](#)

[Setting Lower Limit](#)

[Setting Both Upper and Lower Limits](#)