

Part Number:  
1805237


# Telis<sup>®</sup> 1 Chronis RTS

The Telis 1 Chronis RTS remote control and timer provides control of a single or a group of window coverings in the same room. The Telis 1 Chronis RTS can be used in manual or automatic mode. Manual mode controls the window coverings paired with the remote control. Automatic mode allows you to control window coverings paired with the remote control, using preprogrammed factory settings. Operators can customize the daily and weekly schedules in the “work” program.




**Caution:** To avoid damaging the product:


1. Do not drop or strike.
2. Keep away from moisture and liquid.
3. Do not clean with abrasive cleaning products or solvents. Only use a soft, damp cloth.
4. Keep out of the reach of children.

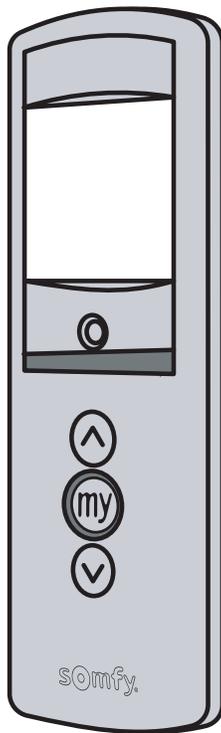

A.

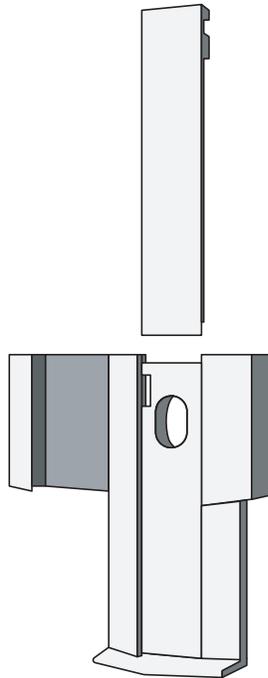


B.

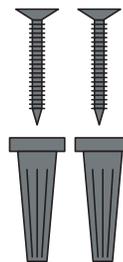

C.

2 x LR03  
AAA 1.5v Batteries


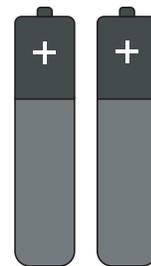


D.

**Included:**


- A. Telis 1 Chronis RTS
- B. Wall mount with screw cover
- C. Screw kit
- D. 2 -LR03 AAA batteries

# 1 Introduction

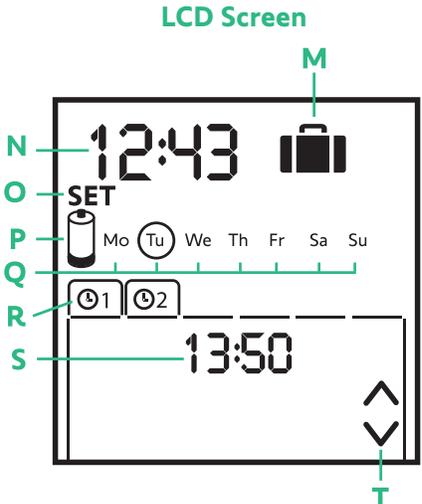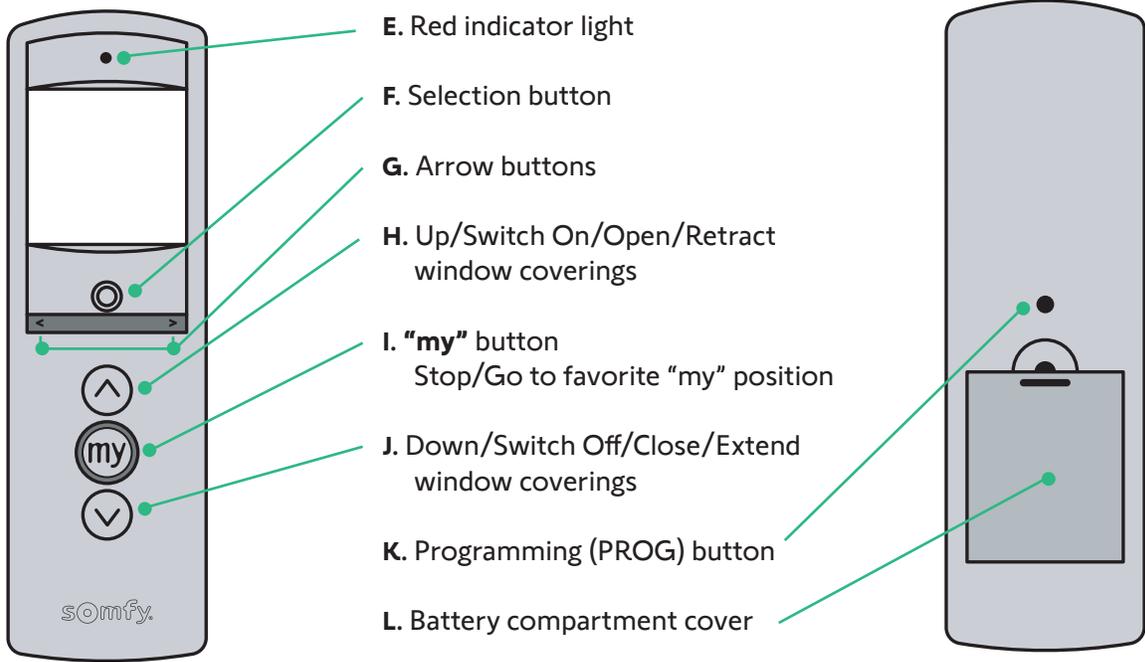

- M. Automatic mode indicator
- N. Current time
- O. Set mode active: SET
- P. Low battery symbol
- Q. Days of the week (work or daily/rest or weekend programming is not displayed in daily programming):  
Mo = Monday, Tu = Tuesday, We = Wednesday,  
Th = Thursday, Fr = Friday, Sa = Saturday, Su = Sunday
- R. Programmed automatic commands (Time 1 and Time 2)
- S. Time selected for executing command in automatic mode.  
In manual mode, "OFF" is displayed
- T. ^ or v commands

## 2 Battery Installation

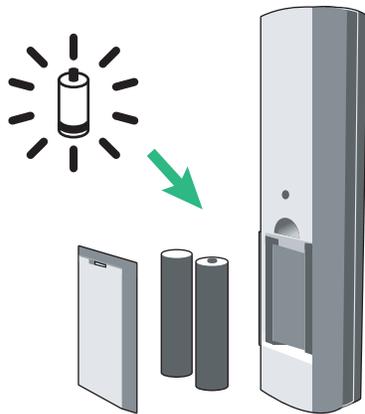

1. Remove the battery cover on back of remote control.
2. Insert 2 AAA (LR3) batteries as indicated inside the compartment.
3. Replace the battery cover.


Replace the batteries when the battery symbol (U) appears on the display.

**Note:** If there is no power supply for an extended time (batteries are depleted or removed), the settings of the remote control transmitter will need to be reprogrammed. However, the automatic orders are saved in memory.



**Never use rechargeable batteries.**

## 3 Wall Mount

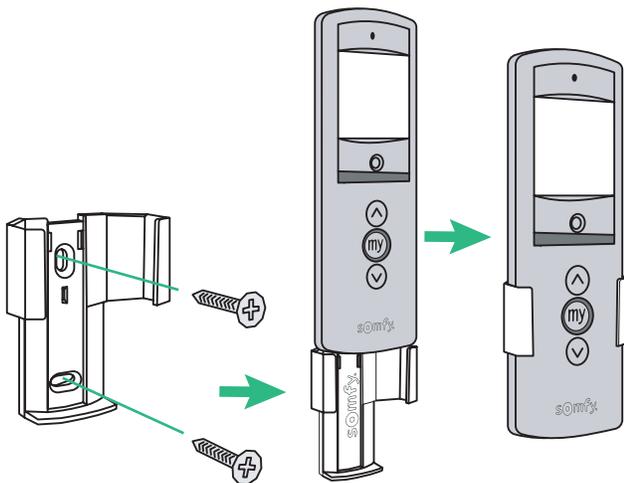

1. Select a location for the wall mount.
2. Mark the screw locations (vertical spacing: 40 mm).
3. Attach the wall mount with the included screws (use anchors if required).

**Note:** The use of digitally connected appliances (e.g. Hi-Fi radio headphones) operating on the same frequency may cause interference and reduce product performance.





**Caution:** Never install the Telis 1 Chronis RTS on or near metal surfaces as this may reduce the signal range.

# 4 Programming

## Set-Up

The Telis 1 Chronis RTS screen switches automatically to sleep mode after two minutes of inactivity. When the screen is off or in sleep mode, press any button to turn it on. When editing settings, pressing and holding the selection button (F) allows you to return to manual or automatic mode. Only saved settings are retained.

Figure A

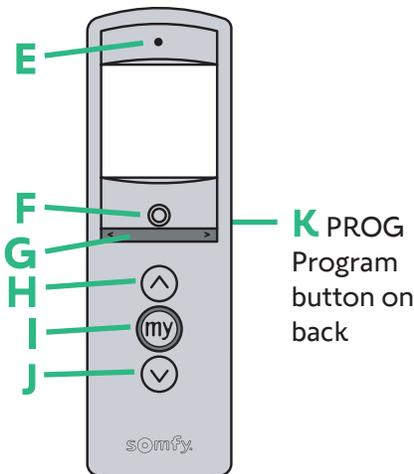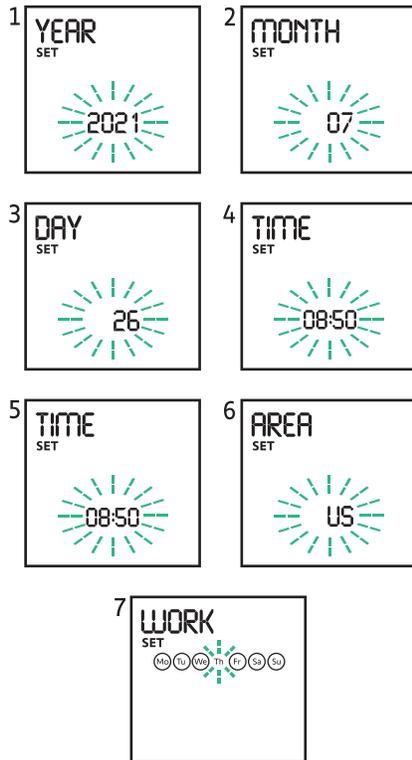

## Programming the remote control

After battery installation, remote control automatically opens the settings mode, starting with “Year” flashing on the screen. If there is no power supply for an extended time (batteries are depleted or removed) selecting automatic mode will activate the “settings” mode. Settings mode follows this order:

### Figure A

1. “YEAR” (current year)
2. “MONTH” (number of the current month)
3. “DAY” (number of the current day)
4. “TIME” (current hour)
5. “TIME” (minutes)
6. “AREA” (country of residence)\*
7. “WORK” (daily/weekend)\*\*

Press the arrow buttons (G) to modify settings (press and hold the button to scroll through the list faster).

To save a setting and move to the next, briefly press the selection button (F).

Exit the settings mode any time by pressing and holding the selection button (F). Saved settings will remain.

\* “AREA” (country of residence)

Note: The Telis 1 Chronis RTS is pre-programmed at the factory to automatically switch between summer and winter conditions based on the country of residence. Select the location of residence such as the United States (US). Select “OFF” to deactivate automatic time change functions (daylight savings) and make the change manually.

\*\* “WORK” (daily/weekend)

1. Select the workdays you want to program using the arrow buttons (G).
2. Briefly press the selection button (F) to confirm the setting; by default, the days not circled will be vacation or weekend days. Exit the settings mode any time by pressing and holding the selection button (F). Saved settings will remain.

Continued On Next Page

## 4 Programming Continued

### Programming the days of the week

In automatic mode, the Telis 1 Chronis RTS sends automatic commands to one or more window coverings for each day of the week.

These automatic commands include:

- The same settings for every day of the week (factory setting).
- Settings divided into two groups of days - workday and weekend. Five workdays have the same operating times each day. The two weekend or rest days operate on the same schedule, which differs from the workday schedule.

The preset mode can be deactivated at any time by pressing and holding the selection button (F). Saved settings will remain.

Modify presets:

- To set the current time for window covering operation, see section "Quick setting of an automatic command".
- To set a specific time for window covering operation, see section "Editing an automatic order".

### Quick setting of an automatic command

1. Using the selection button (F), switch to automatic mode.
2. Press the arrow keys (G) to navigate to the open or close setting you wish to edit (settings for all days or for groups of days if work or weekend days have been configured).
3. Press and hold the Up and Down buttons (H/J) for more than 10 seconds the open or close function to modify a command. "SET" is displayed on the screen, and the order flashes 3 times. Release the button when "SET" disappears from the screen. The desired open or close operation will occur at that time automatically.
4. To quickly store another automatic order, repeat the procedure starting at step 1.


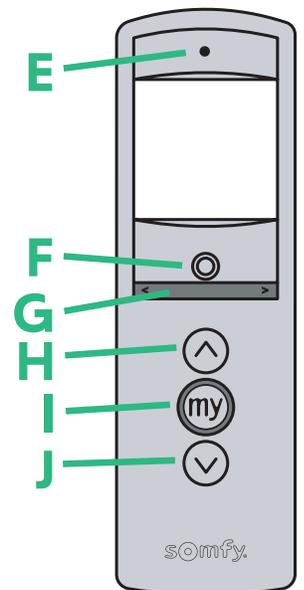


Figure B

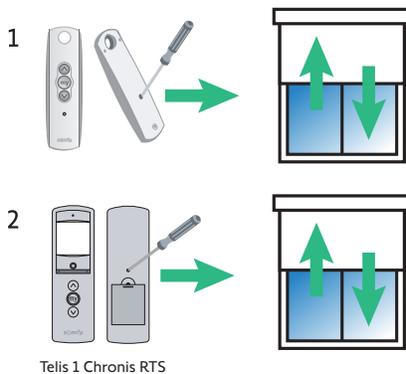

### Pairing or Deleting a Window Covering to another RTS Transmitter - Figure B

Pairing or Deleting a window covering is performed in manual mode.

1. Press and hold the PROG button on the window covering control unit until the window covering moves up and down or jogs. The programming mode is active for 2 minutes.
2. Press the (PROG) programming button (K) on the Telis 1 Chronis remote control. The window covering moves up and down or jogs and is assigned to or deleted from the Telis 1 Chronis remote.

The procedure for pairing or deleting a window covering to the Telis 1 Chronis RTS is the same. It is done only in manual mode.

1. Press and hold the PROG button on the window covering control unit until the window covering jogs. The programming mode is active for 2 minutes.
2. Press the (PROG) programming button (K) on the Telis 1 Chronis remote control. The window covering moves or jogs and is assigned to or deleted from the Telis 1 Chronis remote.

### Deleting an automatic command

1. Using the selection button (F), switch to automatic mode.
2. Press the arrow keys (G) to select the open or close order that you wish to edit (settings for all days or for groups of days if work or weekend days have been configured).
3. Press and hold the selection button (F) until "SET" appears on the screen: "Automatic command programming" mode is activated and "EDIT" flashes.
4. Press one of the arrow buttons (G) to change menu until "Delete" flashes.
5. Briefly press the selection button (F) to confirm the deletion. Exit "EDIT" mode and return to automatic mode.
6. To delete another automatic command, repeat steps 1-5.


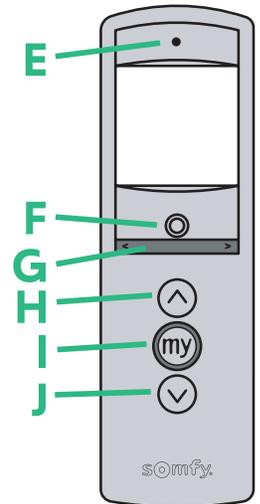


Figure C

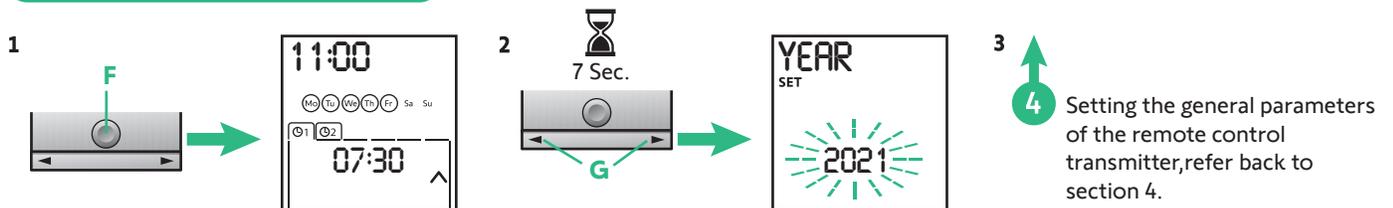

### Modifying the general settings of the Telis 1 Chronis remote control

Figure C

1. Using the selection button (F), switch to automatic mode.
2. Press and hold the selection button (F) until "SET" and "YEAR" appear on the screen. The "settings" mode is activated. The year flashes. This is the first setting to program.
3. Follow the steps in the section "Programming the remote control".

Continued On Next Page

## 5 Operation

To switch from manual to automatic mode or from automatic to manual mode, briefly press the selection button (F).

### Manual mode

The manual mode of the Telis 1 Chronis RTS is used to:

- Send an occasional order to the window coverings.
- Deactivate automatic command programming.

### Manual control

Briefly press the Up, "my" or Down button corresponding to the desired function.

### Automatic mode


The automatic mode of the Telis 1 Chronis RTS is used to:

- Automatically control the window covering, using programmed settings for times or days of the week.  
Example of programming for a day: at 6:45 AM, up command to open all products on the ground floor to take advantage of the sunlight; at 8:00 PM, a down command for all the end-products to protect the house from the cold.
- Programming automatic commands for each day of the week (see section "Programming the days of the week").
- In automatic mode, the current time and the next scheduled automatic command are displayed.
- To view all the automatic commands programmed, scroll from one command to the next using the arrow buttons (G).
- To stop an automatic command that is currently being executed, press the Stop/my button.  
You can also press the Up, "my" or Down buttons in automatic mode.

### Simulated presence function

In automatic mode, the "Simulated Presence" or "Vacation Mode" function randomly changes the times preprogrammed window covering operations occur. By varying the closure or opening of window coverings by 0 to 30 minutes, it simulates your presence in the home while on vacation.

Figure D

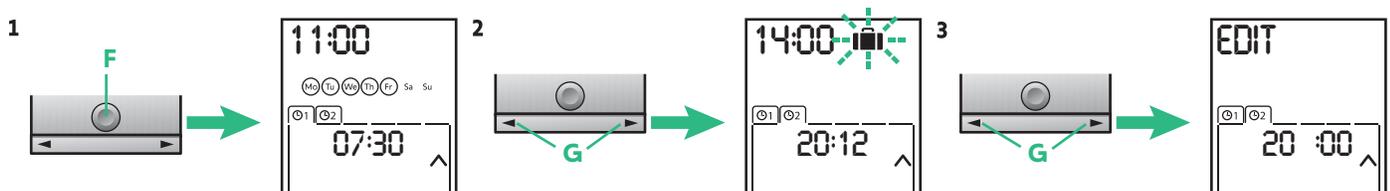

### To activate or deactivate the function:

#### Figure D

1. Using the selection button (F), switch to automatic mode.
2. Press both arrow buttons (G) simultaneously. The (☀️) symbol appears on the screen. The "simulated presence" function is activated.
3. Press both arrow buttons (G) simultaneously. The (☀️) symbol disappears from the screen. The "simulated presence" function is deactivated.



**Note:** Exit the settings mode any time by pressing and holding the selection button (F). Saved settings will remain.

## 6

## Troubleshooting

Observation	Possible Causes	Solution
The window covering does not react at all when a button on the Telis 1 Chronis RTS is pressed.	The batteries are low.	Replace the batteries.
	The remote control transmitter is not programmed.	See section "Adding/ deleting a Telis 1 Chronis RTS".
	External radio equipment is interfering with the radio reception.	Turn off any nearby radio appliances.
	The motor(s) or receiver(s) are in thermal shut-off mode.	Wait for the motor to cool down, then press the desired button again.
A window covering stops during activation.	The window covering has encountered an obstacle.	Remove the obstacle and try again.
	Another control device is sending a command to the motor or receiver	Wait until activation of the window covering has finished, then try again.
The command is being sent at a different time than the programmed time.	The "Simulated presence" function is activated.	Deactivate "Simulated presence" function.
One or more window coverings systematically does not respond to a programmed automatic command.	A signal from another automatic device in your home is causing interference.	Change the programmed time of the automatic command.



**Note:** Visit <https://store.somfy.com/> to purchase an additional or replacement product.



**BATTERY RECYCLING OR DISPOSAL**  
Discard batteries and electrical components following local codes or regulations. Recycle batteries and electrical components with designated electronic recycle centers.

This device is FCC certified and complies with part 15 of the FCC rules.  
RTS compatibility: RTS transmitters are capable of operating any RTS motor.