

# SOLANA MOTOR

## SETTING LIMITS

**⚠ ATTENTION:** Negative (-) adjustments **must be done while the awning is in motion**. This way, you can see where the awning stops while adjustments are being made.

For Positive (+) adjustments, awning **must be stationary at it's current limit**. Awning will begin to move when you start turning the dial.

Use corresponding instructions below based on if your awning is **Left Handed** or **Right Handed**.

### MOTOR LEFT

On LH motor, the **WHITE** dial sets the "EXTENDED" limit, while the **RED** dial adjusts the "RETRACTED" Limit

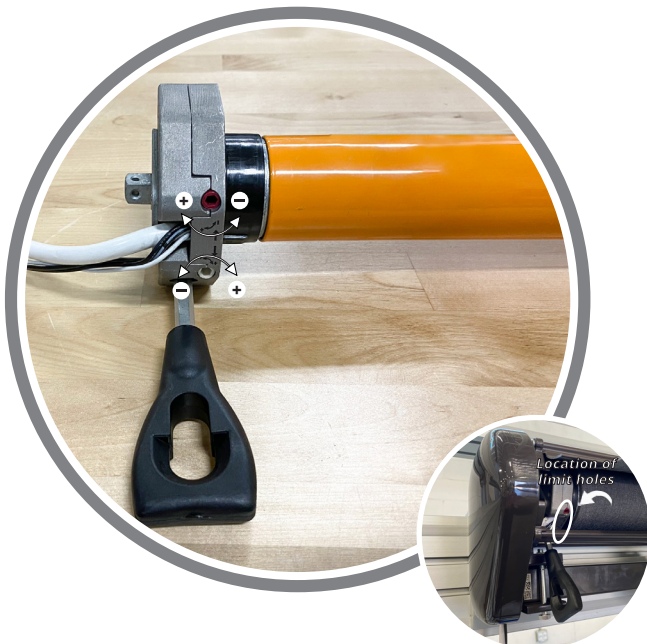


Image depicts Left Handed Motor

### MOTOR RIGHT

On RH motor, the **WHITE** dial sets the "RETRACTED" limit, while the **RED** dial adjusts the "EXTENDED" limit.



Use the limit setting tool for adjustments

EXTENDED	RETRACTED
<ul style="list-style-type: none"> <li>Use the <b>WHITE</b> dial</li> <li><b>Clockwise (+)</b> moves awning <b>away</b> from cassette</li> <li><b>Counter clockwise (-)</b> brings awning <b>closer</b> to cassette</li> </ul>	<ul style="list-style-type: none"> <li>Use the <b>RED</b> dial</li> <li><b>Clockwise (+)</b> brings awning <b>closer</b> to cassette</li> <li><b>Counter Clockwise (-)</b> moves awning <b>further</b> from cassette</li> </ul>

EXTENDED	RETRACTED
<ul style="list-style-type: none"> <li>Use the <b>RED</b> dial</li> <li><b>Counter Clockwise (+)</b> moves awning <b>away</b> from cassette</li> <li><b>Clockwise (-)</b> brings awning <b>closer</b> to cassette</li> </ul>	<ul style="list-style-type: none"> <li>Use the <b>WHITE</b> dial</li> <li><b>Counter Clockwise (+)</b> brings awning <b>closer</b> to cassette</li> <li><b>Clockwise (-)</b> moves awning <b>further</b> away from cassette</li> </ul>