

Baby Grande and Grande Exposed Roll Shade with Crank and Cables Installation Instructions

Tools Needed	Hardware Provided (per shade)	Hardware Needed
Drill Measuring Tape Pencil 2" Level Plumb Line ¼" Masonry Drill Bit Hammer Linesmans Pliers Cable Cutters Phillips & Flat-Head Screw Driver 11/32 Socket or Open End Wrench 5/32 Allen Wrench	Brackets (2) Gear (1) Gear Bolts with Lock Washers (2) Cable with Tension Rod, Washers & Nuts (2) Cable Anchors (2) Eye bolts (2) Simplex Cable Fasteners (2 per shade) Hand Brace (1) Shade Tube (1)	5/16" X 4 ½ " Lag Screws or Appropriate (4 per shade) 3/8" Flat Washers or Appropriate (4 per shade)

[* BELOW INSTRUCTION PICTURES GO FROM LEFT TO RIGHT]

1. Set-Up Shade For Mounting



After parts are removed from packaging, temporarily remove bottom bar fabric on flat surface to make shade lighter to handle.


2. Install Brackets- Attach, Fix, Secure



Gear End Bracket




Idler Bracket

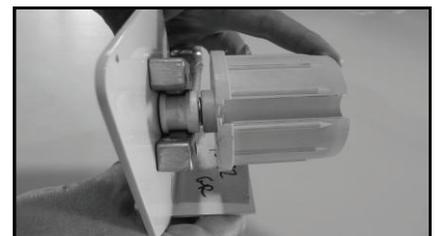


*Please mount brackets at width ordered, measurement includes mounting bolts on hardware. Using appropriate lag bolts and washers, start at one end and attach bracket to mounting surface. Make sure bracket is level before securing screws. Repeat same process on opposite side with remaining bracket.

3. Hang Tube With Fabric - 2 Person Job

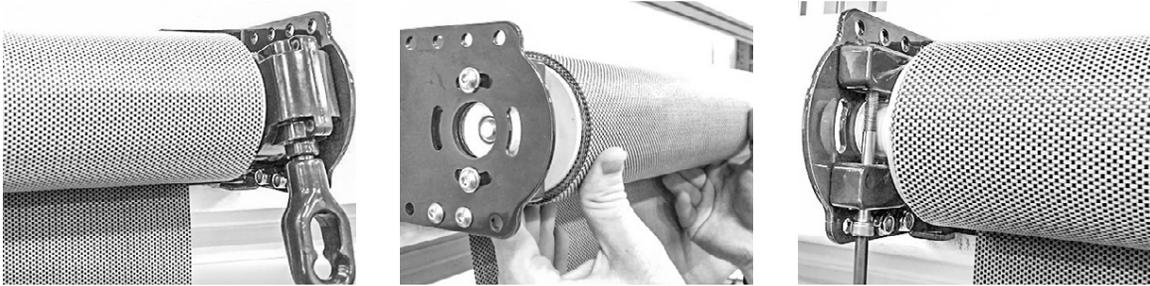


Remove bolt from cradle idler and place white bearing on round pin. With your partner, hold tube with fabric up to brackets. Starting with your square pin end (operating side of shade), slide square pin into gear (#1). Once square pin is inserted into gear, take other end of tube (non-operating side of shade round pin) and slide it into idler and replace bolt to lock in place (#2).

4. Install Cable Anchors


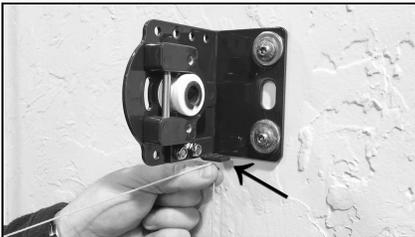


Use Plumb Line to hang from bracket (where pointing in picture) down to floor. Mark spot with pencil for cable anchor. Drill hole with $\frac{1}{4}$ " masonry drill bit.

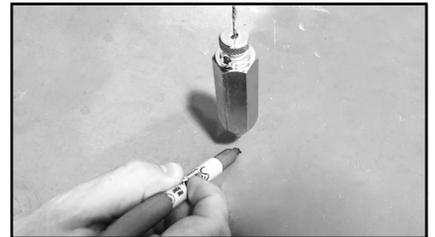

Hammer in cable anchor, making sure it is straight. (You will repeat this process on other side)

[NOTE: Cable anchors should be hammered in as far as they can go.]

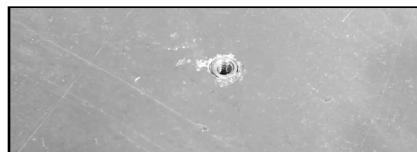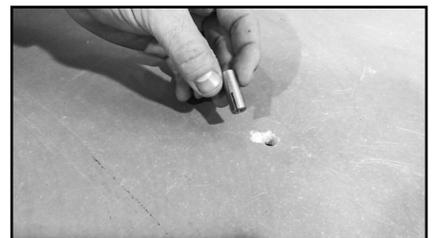



Thread eye bolt until it's tight and flush to the mounting surface.



5. Install Cable Guide



Insert threaded rod into cable bracket. Put washer over rod and thread nut on top. Finger tighten top nut. Leave approx. 6 threads exposed above nut.

Repeat whole process on other side

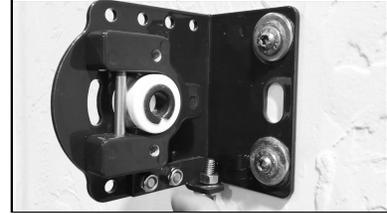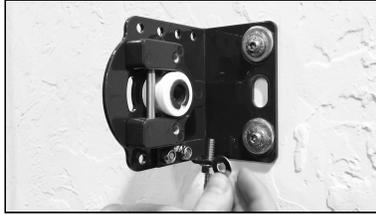

Roll shade down. Insert bottom bar.
BE SURE CABLE IS INSERTED IN EYELET.


Pass cable through installed eye bolt and use simplex fastener to secure cable.

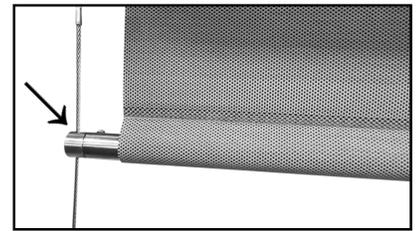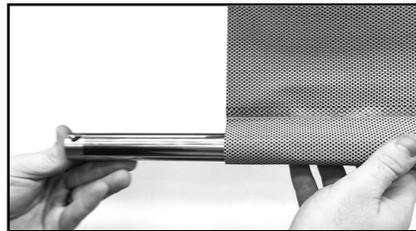

6. Assemble Simplex Fastener

Pass end of cable through clip on once side of screw thread.
Create a loop in the cable to required size.
Pass cable back through clip on opposite side of screw thread.
Place the plate and nut over screw head and thread to hold the cable securely.
Tighten nut using 7mm socket and lock into place.
Cut off excess cable.



(You will repeat process on other side.)

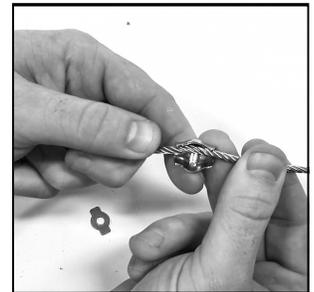


7. Tension Cable Guide

Hold cable sleeve while tightening the top nut using a 7/16 wrench. The cable should be taut, having no slack. Tighten the bottom nut to secure tension on the cable guide.

Repeat whole process on other side

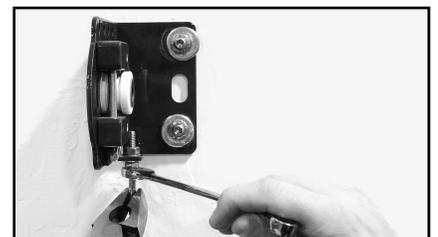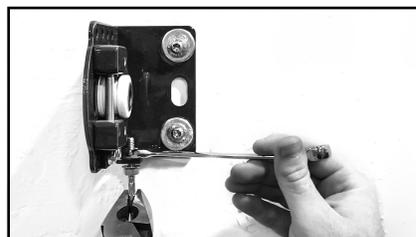

7. Operate Shade

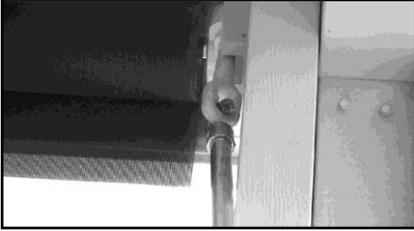

Slide hook end of hand brace into eyelet of gear on shade. Shade rolls up and down on cable guides.

You're done! Enjoy!