

# CHAIN TENSION DEVICE Installation Instructions

## GETTING STARTED

**IMPORTANT:** When attaching to wood, included screws can be screwed directly into wood. When attaching to drywall or metal, use anchors that are designed for such substrates. See your hardware store or supplier for guidance on appropriate anchors for your substrate.

### TOOLS NEEDED:

- Pencil
- Phillips head screwdriver
- Tape measure
- Power drill

### PARTS INCLUDED:



## STEP 1: POSITION TENSION DEVICE



The tension device must be installed to make the shade fully operable.

Before doing anything, you **must** first slide the tension device to the bottom of the bead chain.

While holding the tension device in one hand, pull the plunger away from the bead chain with the other hand. Lift the bead chain out of the bead locking groove and slide the tension device to the bottom of the chain loop.

Pull the tension device down until the bead chain is fully tensioned (plunger will be at the top) and then move the tension device up approximately  $\frac{1}{8}$ ".

Mark the screw hole locations on the wall with a pencil.

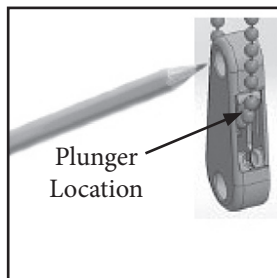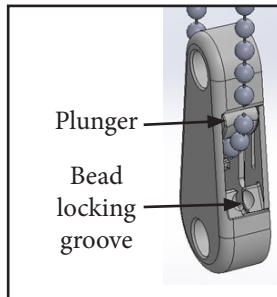


## STEP 2: MOUNT TENSION DEVICE

### INSIDE MOUNT

If mounting into wood, predrill screw holes and then install the tension device using the 2 large screws provided.

If not securing into wood, use appropriate anchors for the substrate and follow anchor manufacturer's instructions.

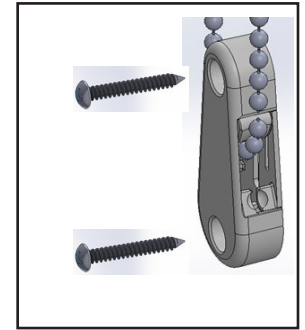

### OUTSIDE MOUNT

Align the mounting bracket sight holes with the pencil marks.

If mounting into wood, predrill screw holes and then install the mounting bracket using the 2 large screws provided.

If not securing into wood, use appropriate anchors for the substrate and follow anchor manufacturer's instructions.

Press the tension device onto the mounting bracket posts. Carefully install the 2 small screws provided, through the tension device into the mounting bracket using a phillips head screwdriver. **DO NOT OVER-TIGHTEN.**

