


**Side and Bottom  
2 1/2 Inch Channel  
“Modular” Installation**

**#1 Install the Light Blocking Fascia**

Test Shade to confirm it is rolling correctly.  
Install front Fascia. Position side channels slightly under the Fascia.

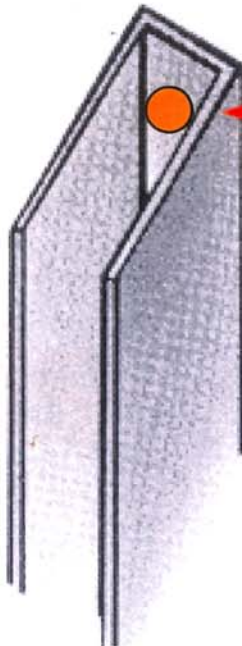

**Inside Frame Mount Installation**

*Locate a firm mounting point*

Use two or three flat head screws. They must be fully set so bottom Bar will pass.

Operate shade to confirm it is rolling smoothly.  
Secure side channels to the window frame by drilling directly through the back surface.

**Outside Frame Mount Installation**


Operate shade to confirm it is rolling smoothly.  
Mark position of the side channels.

*Locate two firm mounting points.*

Use a 1/2 inch bit too drill through the outside of the channel. #1

Use a 3/16 drill to drill through the inside channel. #2 Secure with two screws.

Seal the two 1/2 inch holes with the included plastic buttons.

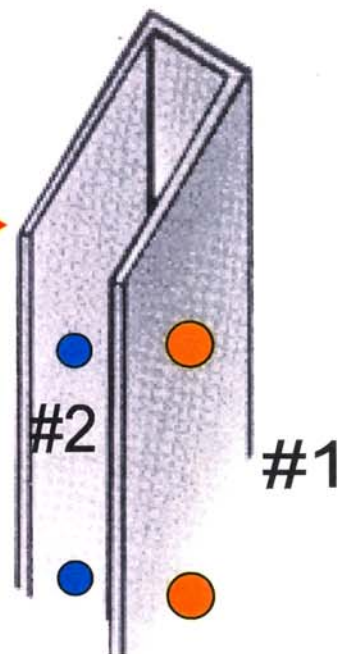

**Bottom Channel-Install between side channels.**

Seal holes the two 1/2 inch holes with the included plastic buttons.

Fill in any gaps with matching Caulk.

The backs of the side channels can be interlock if installing between two windows. They must also be secured with screws or foam tape.