




The Spring Motor must be under tension before removing wrapper or placing in brackets!

Wind the Spring Clockwise




Position shade Level (parallel to floor)

1. Spring tension is factory set; but may unwind in transit.
2. Use the slot shade bracket to turn the spring driver.
3. Check tension by lightly turning Flat spring driver Clockwise.
If no spring load is felt please reset tension.
4. Keep shade level-rotate Flat Driver Clockwise 10 to 12 full turns.
5. Release winder slowly until the internal lock holds spring load.
6. Install shade Brackets level on a solid surface, open Safety

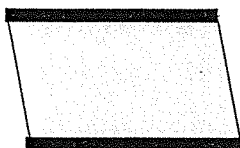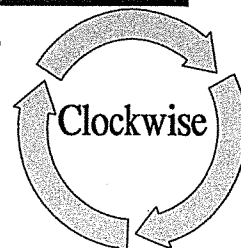

**Shades does not roll up correctly
Immediate attention is required**

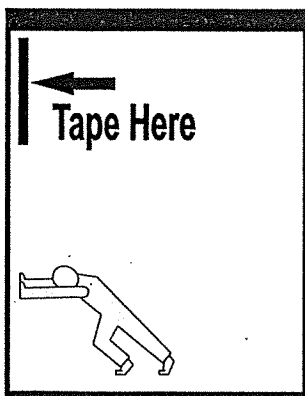

Corrected shade rolls to Tape side.

Installation is not level; the shade rolls to the High side.

This will cause the shade material to telescope over the end of the roller and rub brackets.

1. Lower shade to expose roller. On the *opposite side of the incorrect roll* place a 3 Inch Length of 1/2 Inch Masking Tape on the Long Edge of the Shade Material or on the Roller edge. This balances (level) the roller. Additional layers of tape may be required until the shade rolls up evenly. Operate slowly to be sure the roll is correct; stop at once if material runs to one side.
2. Or reposition Brackets level. Remove shade (cover with paper to keep clean)

Solar-Screen
Co. Inc.

53-11 105th Street Corona, New York 11368
718-592-8222
Fax 718-271-0891