



## Simplicity Rechargeable Motor Replacement - No Headrail

### Step 1: Remove the shade from the window

- Rotate the T-hook on the support bracket. Lift the post up and off the support bracket.


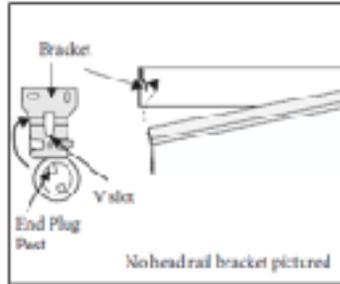


### Step 2: Slide the motor out of the tube

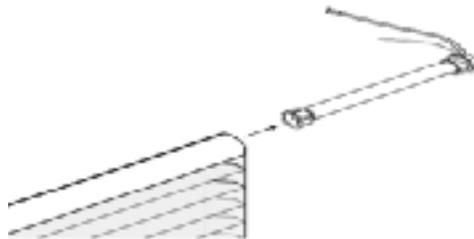

### Step 3: Replace the motor

- Before inserting the new motor, slide its black rubber crown over to the end making sure the groove in the crown lines up to the raised notch on the motor. See blue arrow below pointing to the Crown Groove.

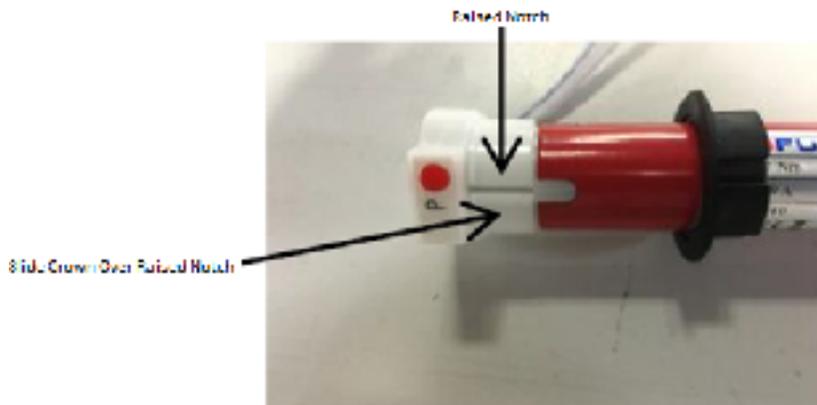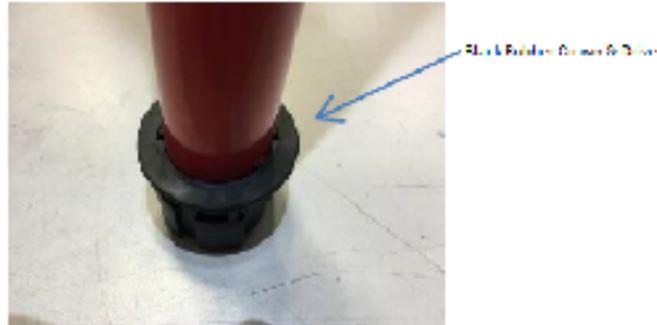

- Insert the new motor into the end of the roller tube. When reinstalling in brackets, be sure red button is facing down. This will allow access to the red button for programming. See photo above.
- Follow installation instructions to set limits.

