


## Citadel 2022 Roller tube – XQ motor with blue FRT Tube Adapters

Parts needed for installing motor correctly into roller tube.

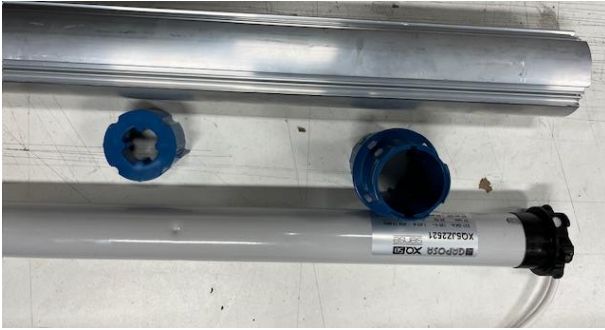

Roller Tube

Drive (L) & Crown (R) (both Blue)

Motor

1<sup>st</sup> Step

Slide Crown onto motor as shown.



Slide all the way on to match notch on blue crown to motor. It must slip all the way on.



2<sup>nd</sup> Step


Install the motor drive on the end of the motor.



Slide on until white clip engages drive securely.



3<sup>rd</sup> Step – slide motor into roller tube.

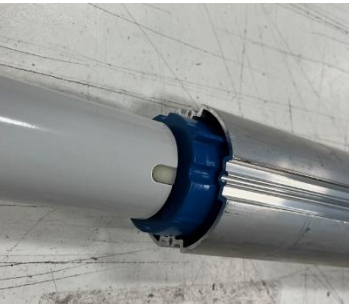

Drive end goes in 1<sup>st</sup>, must match notches correctly for it to slide in.



Slide in until both motor crown and drive are fully inserted into the roller tube. Then install the 4 screws to secure the motor crown on to roller tube.

Motor must be fully inserted into crown as shown.

Refer to your installation instructions on how to install roller tube into housing unit.