


# QCTZ16Y

16 channels hand held  
display remote

INSTALLER  
MANUAL

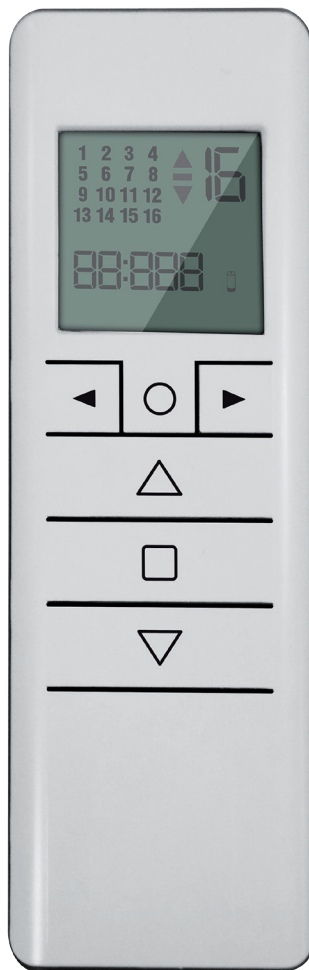

## TECHNICAL DATA

Radio frequency: 434.15 MHz

Protection rating: IP 30

Operating temperature: 0°C to + 60°C (+ 32°F to + 140°F)

Dimensions: 150 x 47 x 12 mm

Power supply: 1 x 3V 2450 Lithium battery

## DESCRIPTION

The QCTZ16Y hand-held display remote which allows you to control up to 16 motors or groups of motors wirelessly.

Features:

- LCD display
- Easy customization of groups (Up to 8)
- Pre-set ALL channel control
- Easy recall of groups
- Hide unused channel function (to be implemented)
- Magnetic wall mount

## SAFETY

### 1. Safety and responsibility

Please read this guide carefully before installing and using this product.

Any use outside the sphere of application defined by GAPOSA is prohibited. This invalidates the warranty and discharges GAPOSA of all liability, as does any failure to comply with the instructions given herein. Never begin installing without first checking the compatibility of this product with the associated equipment and accessories.

### 2. Specific safety instructions

To avoid damaging the product:


- Avoid impacts!
- Do not drop it!
- Do not spray or immerse in liquids.
- Keep out of the reach of children.
- Do not use abrasive products or solvents to clean the product. Its surface can be cleaned with a soft, damp cloth.

**PLEASE NOTE: do not use motors with remote controls in areas with risks of radio disturbs over the norm (i.e. airports or radio repeaters). These units may also be disturbed by telecommunication and/or transceiver systems working on the same frequency.**

---


## BUTTONS

- Single channel/group control mode
- ◀ ▶ Select channel/group
- △ Up
- Stop
- ▽ Down
- A** SYNC
- B** LIMIT

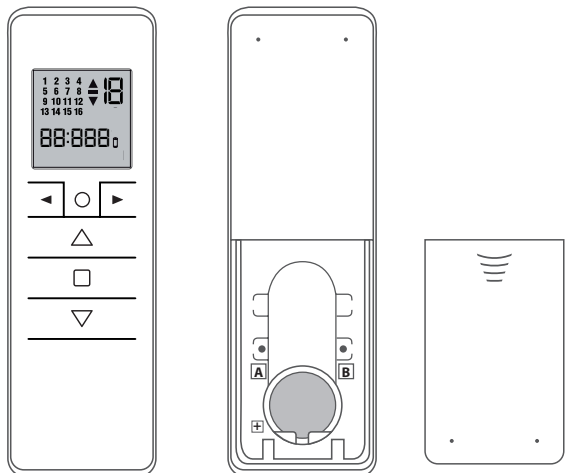





## SELECTING A CHANNEL/GROUP

When pressing the circle button  sequentially the modes can be switched from single channel control mode to group control mode.

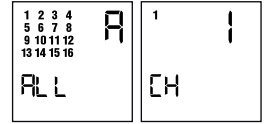


Briefly press the circle button  to enter single channel mode, scroll the channels with the arrow buttons ( or ): each channel is identified by a number.

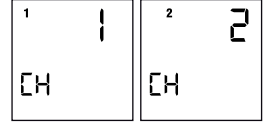





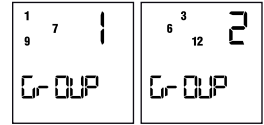





Briefly press the circle button  to enter group control mode. The first group to appear is the all channels group. Scroll through the pre-made groups with the arrow buttons ( or ): each group is identified by a number.

*Note: Only the groups that have been created previously (see section below) will appear. No groups will appear if groups have not been created previously.*









## CUSTOMIZATION OF THE GROUPS





1. Briefly press the circle button  to enter in group control mode.
2. To create a group press both arrow buttons ( and ) for 2 seconds. The icon **SEL** appears and channel 1 starts flashing.
3. Using the arrow buttons ( or ), scroll to the channel to be set into the group.
4. Press for 2 seconds both arrow buttons ( and ) to select the channel. Then move to the other channels to be set and select each one in the same fashion.
5. When all the desired channels of the group are set press the  UP,  STOP or  DOWN button to confirm the group. The group is identified by a number. The group you set takes the first number available in progressive fashion from 1 to 8.

*Note: Only 8 groups can be created.*

## DELETING GROUPS

1. Enter the group screen by pressing the circle button .
  2. Press and hold the circle button  until **dEL**  appears on screen.
  3. Press the  STOP button to enter the delete groups mode.
  4. Page through the saved groups using the left and right arrow buttons.
  5. Once the group that needs to be deleted is selected, press the  STOP button to confirm the deletion.
- Note: the delete groups mode can be exited at any time by pressing the circle button  again.*

## HIDING CHANNELS

1. Make sure the channel selection screen is visible, it can be changed by pressing the circle button .
2. Press and hold the circle button  until **HiDE** appears on screen.
3. Press the  STOP button to enter **HiDE** channels mode.
4. By pressing the left and right arrow buttons, the required hidden channels can be selected.
5. Once the required hidden channels are selected, press the  STOP button to confirm the hidden channels. The numbers on the screen will blink quickly for confirmation.

*Note: Channels can be unhidden using the same process. Just deselect the channels.*

## PROGRAMMING TRANSMITTER (Fig.1)

**CAUTION:** If more motors with receiver have to be installed, it is important to power up **only one motor at time** during the first programming session, in order to avoid any interferences with the others.

1. Power up the motor to be programmed.
2. Hold SYNC pressed until the motor starts moving.
3. Check the rotation of the motor, then release SYNC (the motor stops).
4. Within 5 seconds press the corresponding button (i.e. UP if the motor rotates upwards or DOWN if vice versa).


In this way the transmitter has been programmed and the rotation of the motor has been synchronized.

## ADDING TRANSMITTER (Fig.1)

2. Hold SYNC pressed of a transmitter **already paired** until the motor starts moving.
3. Check the rotation of the motor, then release SYNC (the motor stops).
4. Within 5 seconds press the corresponding button (i.e. UP if the motor rotates upwards or DOWN if vice versa) on the **new transmitter being added**.

Additional transmitter is now added

FIG. 1

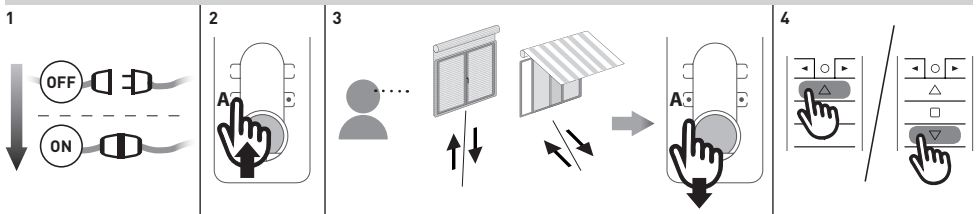


## CHECKING/CHANGING DIRECTION (Fig.2)

**IMPORTANT:** change direction must be performed before starting limit setting otherwise limits must be reset.

Press  $\Delta$  UP or  $\nabla$  DOWN button the motor should go UP or DOWN, otherwise to change direction:

1. Press and hold SYNC button till the motor starts moving
2. Press the  $\square$  STOP button: The motor makes a brief jog.  
Direction of the motor has been reversed.


FIG. 2

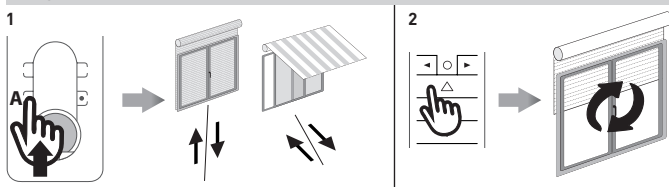

## ERASING TRANSMITTERS (Fig. 3)

Push simultaneously SYNC and STOP of the transmitter until the motor makes a brief movement in both directions. *Only the transmitter used for this procedure has been deleted from motor memory*

FIG. 3

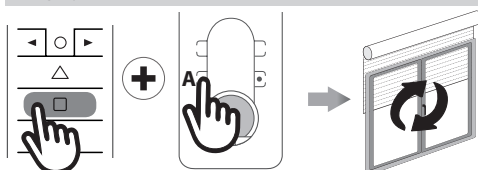


## RESET MOTOR MEMORY

### OPTION 1 (Fig. 4) - Using an already programmed transmitter

Press and hold both SYNC and STOP buttons till the motor makes first a brief jog and, after a while, a second long jog. Memory is now empty.


FIG. 4

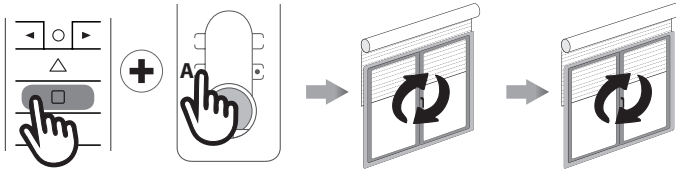

### OPTION 2 (Fig. 5) - Without an already programmed transmitter

1. Switch the motor power supply OFF. Then switch it ON.
2. Within 8 seconds, using any Gapos transmitter, press and hold both SYNC and STOP buttons until the motor makes a long jog. Memory is now empty.

FIG. 5

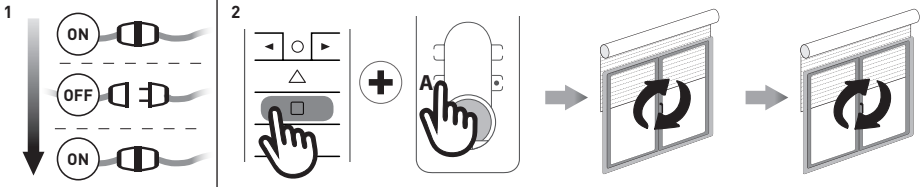


### LIMIT SWITCH SETUP (Fig. 6) *(Just for motors with electronic limit switch)*

**ATTENTION: ALWAYS SET THE UP LIMIT SWITCH FIRST**

1. Push LIMIT till the motor makes a brief movement in both direction  
**Note: during "programming mode" the operations are in "deadman control"**
2. Press and hold the  $\Delta$  UP button and run the motor to the desired UP limit position.
3. Press the  $\square$  STOP button to set the UP limit position. The motor makes a brief jog.
4. Press and hold the  $\nabla$  DOWN button and run the motor to the desired DOWN limit position.
5. Press the  $\square$  STOP button to set the DOWN limit position. The motor makes a brief jog.

*Note: accurate limit setting can be performed when UPWARD or DOWNWARD by pressing a second time LIMIT: the motor then moves slowly in steps towards to the desired limit. Always press STOP button to set the limit position.*

FIG. 6

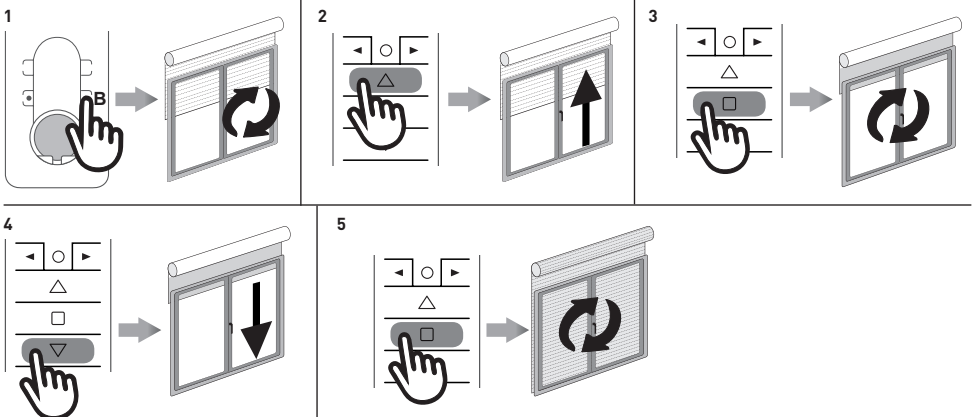

## AUTOMATIC SETTING OF THE LIMITS

*(Just for motors with electronic limit switch)*


For limits set with torque sensor (mechanical stop of shutters or cassette awnings/shades), press and hold  $\triangle$  UP button until the bottom bar hits the cassette or shutter box.

A short jog will indicate that the UP position has been memorized. The same procedure can be followed for DOWN limit **but only for roller shutters**.

## INTERMEDIATE POSITION SETUP (Fig. 7)

*(Just for motors with electronic limit switch)*

Stop the shutter/awning in the desired intermediate position, then press simultaneously the UP and DOWN buttons until the motor makes a brief movement in both directions.

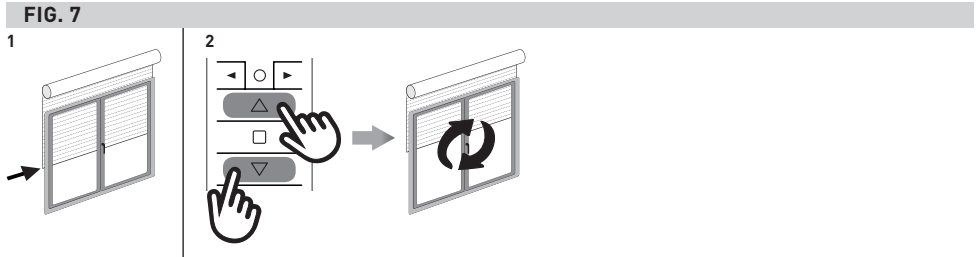

## TRANSMITTER FACTORY RESET

The factory reset will un-hide any hidden channels and delete all custom groups.

1. Remove the battery cover on the back of the transmitter.
2. Remove the battery.
3. Press and hold the circle button  $\bigcirc$  while reinserting the battery, once the screen comes back on and displays, **RESET** will appear and the circle button  $\bigcirc$  can be released.
4. After about 3 seconds the transmitter will start up and all channels will be un-hidden, and any groups deleted.





**GAPOSA Inc.**  
3920 Providence Road  
Newtown Square PA 19073  
Ph. 610 325 3697  
info@gaposa.com

**GAPOSA srl**  
via Ete, 90 - 63900 Fermo - Italy  
T. +39.0734.220701 - F. +39.0734.226389  
info@gaposa.com - [www.gaposa.com](http://www.gaposa.com)