



## Changing the Cord Loop on the Omni-Rise

1. Completely lower the shade. Slide the clutch assembly out of the headrail as far as the spears will allow.
2. Remove the clutch cover. Gently lift up the latch on the top of the clutch. Then rock the cover off the clutch, pivoting it at the bottom.
3. Remove the loop. Bend the cord out of the channel, into the space between two pulley "teeth." Use the cord as a handle to pull the pulley all the way around to the other channel.

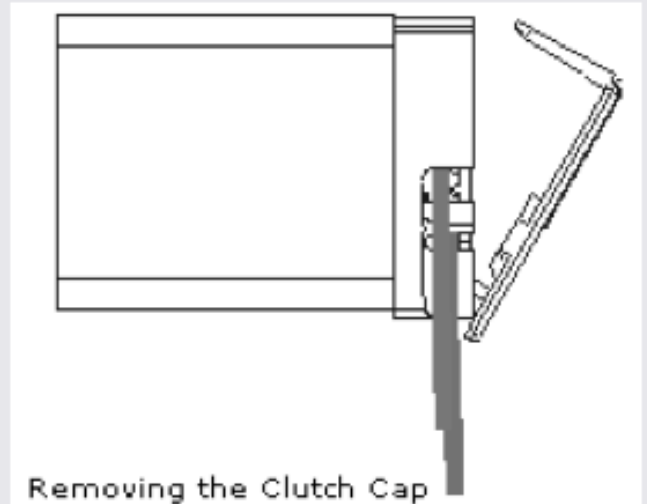

Removing the Clutch Cap

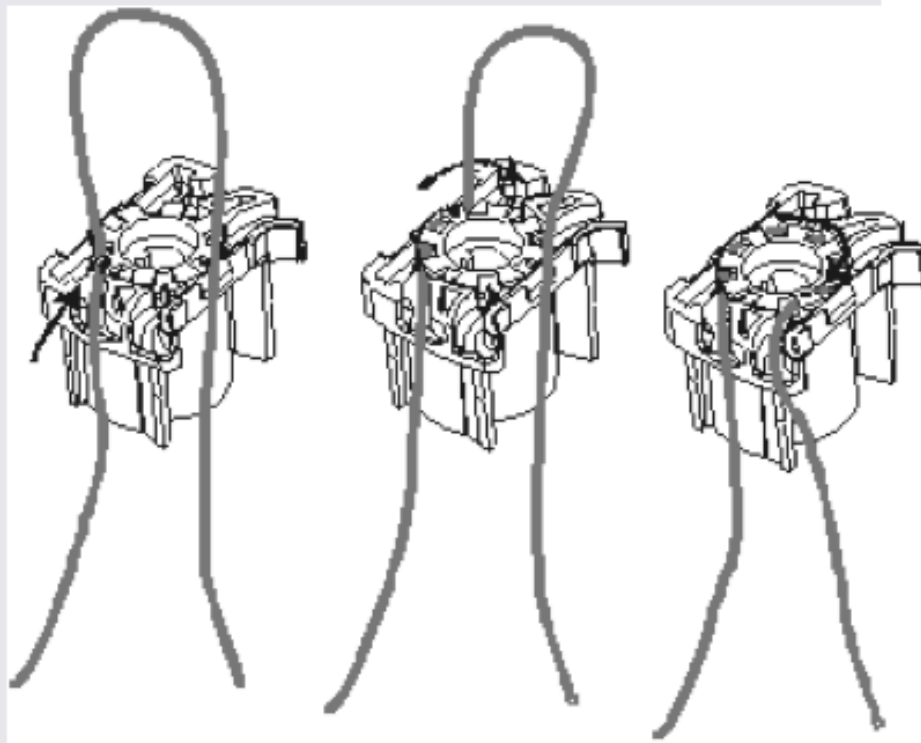

Installing the new cord loop.

4. Insert the new loop. Select an appropriate cord length for the shade. When finished, both sides of the loop must emerge in the front of the clutch.
5. Once the cord engages a pulley tooth at the upper channel opening, use the cord to rotate the pulley all the way around to the lower channel.
6. Replace the clutch cover. Place the bottom tab of the clutch cover at the bottom of the clutch. Swing the top end up and snap into place.